


Exploded view diagram of the Epson 7750 printer, showing the main body and various components. The diagram includes the following parts and their assembly sequence:


- 130**: Top cover (Except for EAI (NA))
- 132**: Front cover
- 107**: Rear cover
- 108**: Rear cover bracket
- 101**: Rear cover hinge
- 100**: Paper tray
- 104**: Paper support plate
- 106**: Paper support plate
- 133**: Paper support plate
- 134**: Paper support plate
- 109**: Paper support plate
- 111**: Paper support plate
- 110**: Paper support plate
- 105**: Paper support plate
- 113**: Paper support plate
- 119**: Paper support plate
- 120**: Paper support plate
- 118**: Paper support plate
- 115**: Paper support plate
- 117**: Paper support plate
- 114**: Paper support plate
- 112**: Paper support plate

This diagram is an exploded view of a mechanical assembly, likely a printer or copier, showing various components and their assembly sequence. The parts are labeled with numbers in blue text. The assembly includes a main frame (731), a top cover (712), a control panel (769), a paper tray (730), and a carriage assembly (713, 714, 715, 716, 717). Other components include a motor (580), a drive shaft (589), and various rollers and guides (555, 558, 559, 572, 588, 597, 598, 725, 726, 767, 770, 771, 772, 774). The diagram uses dashed lines to indicate the assembly path and alignment of the parts.


Only numbered Service Parts are available.

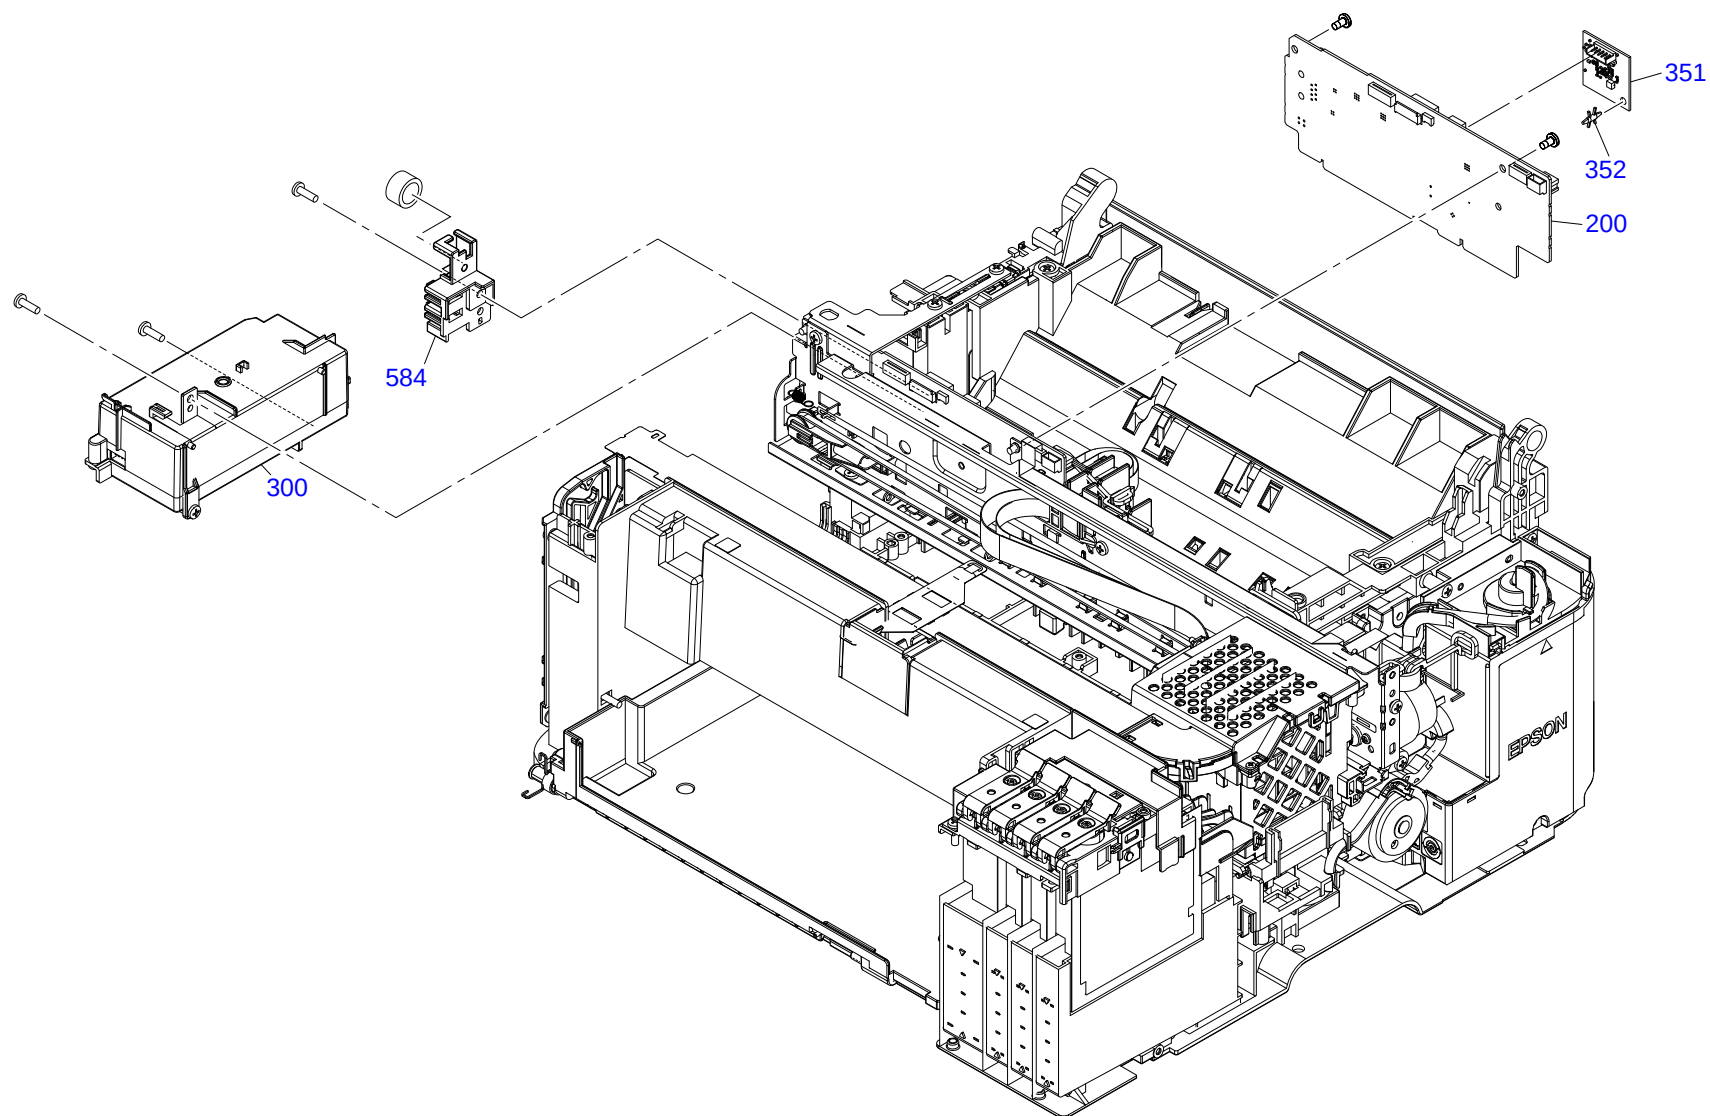


Only numbered Service Parts are available.

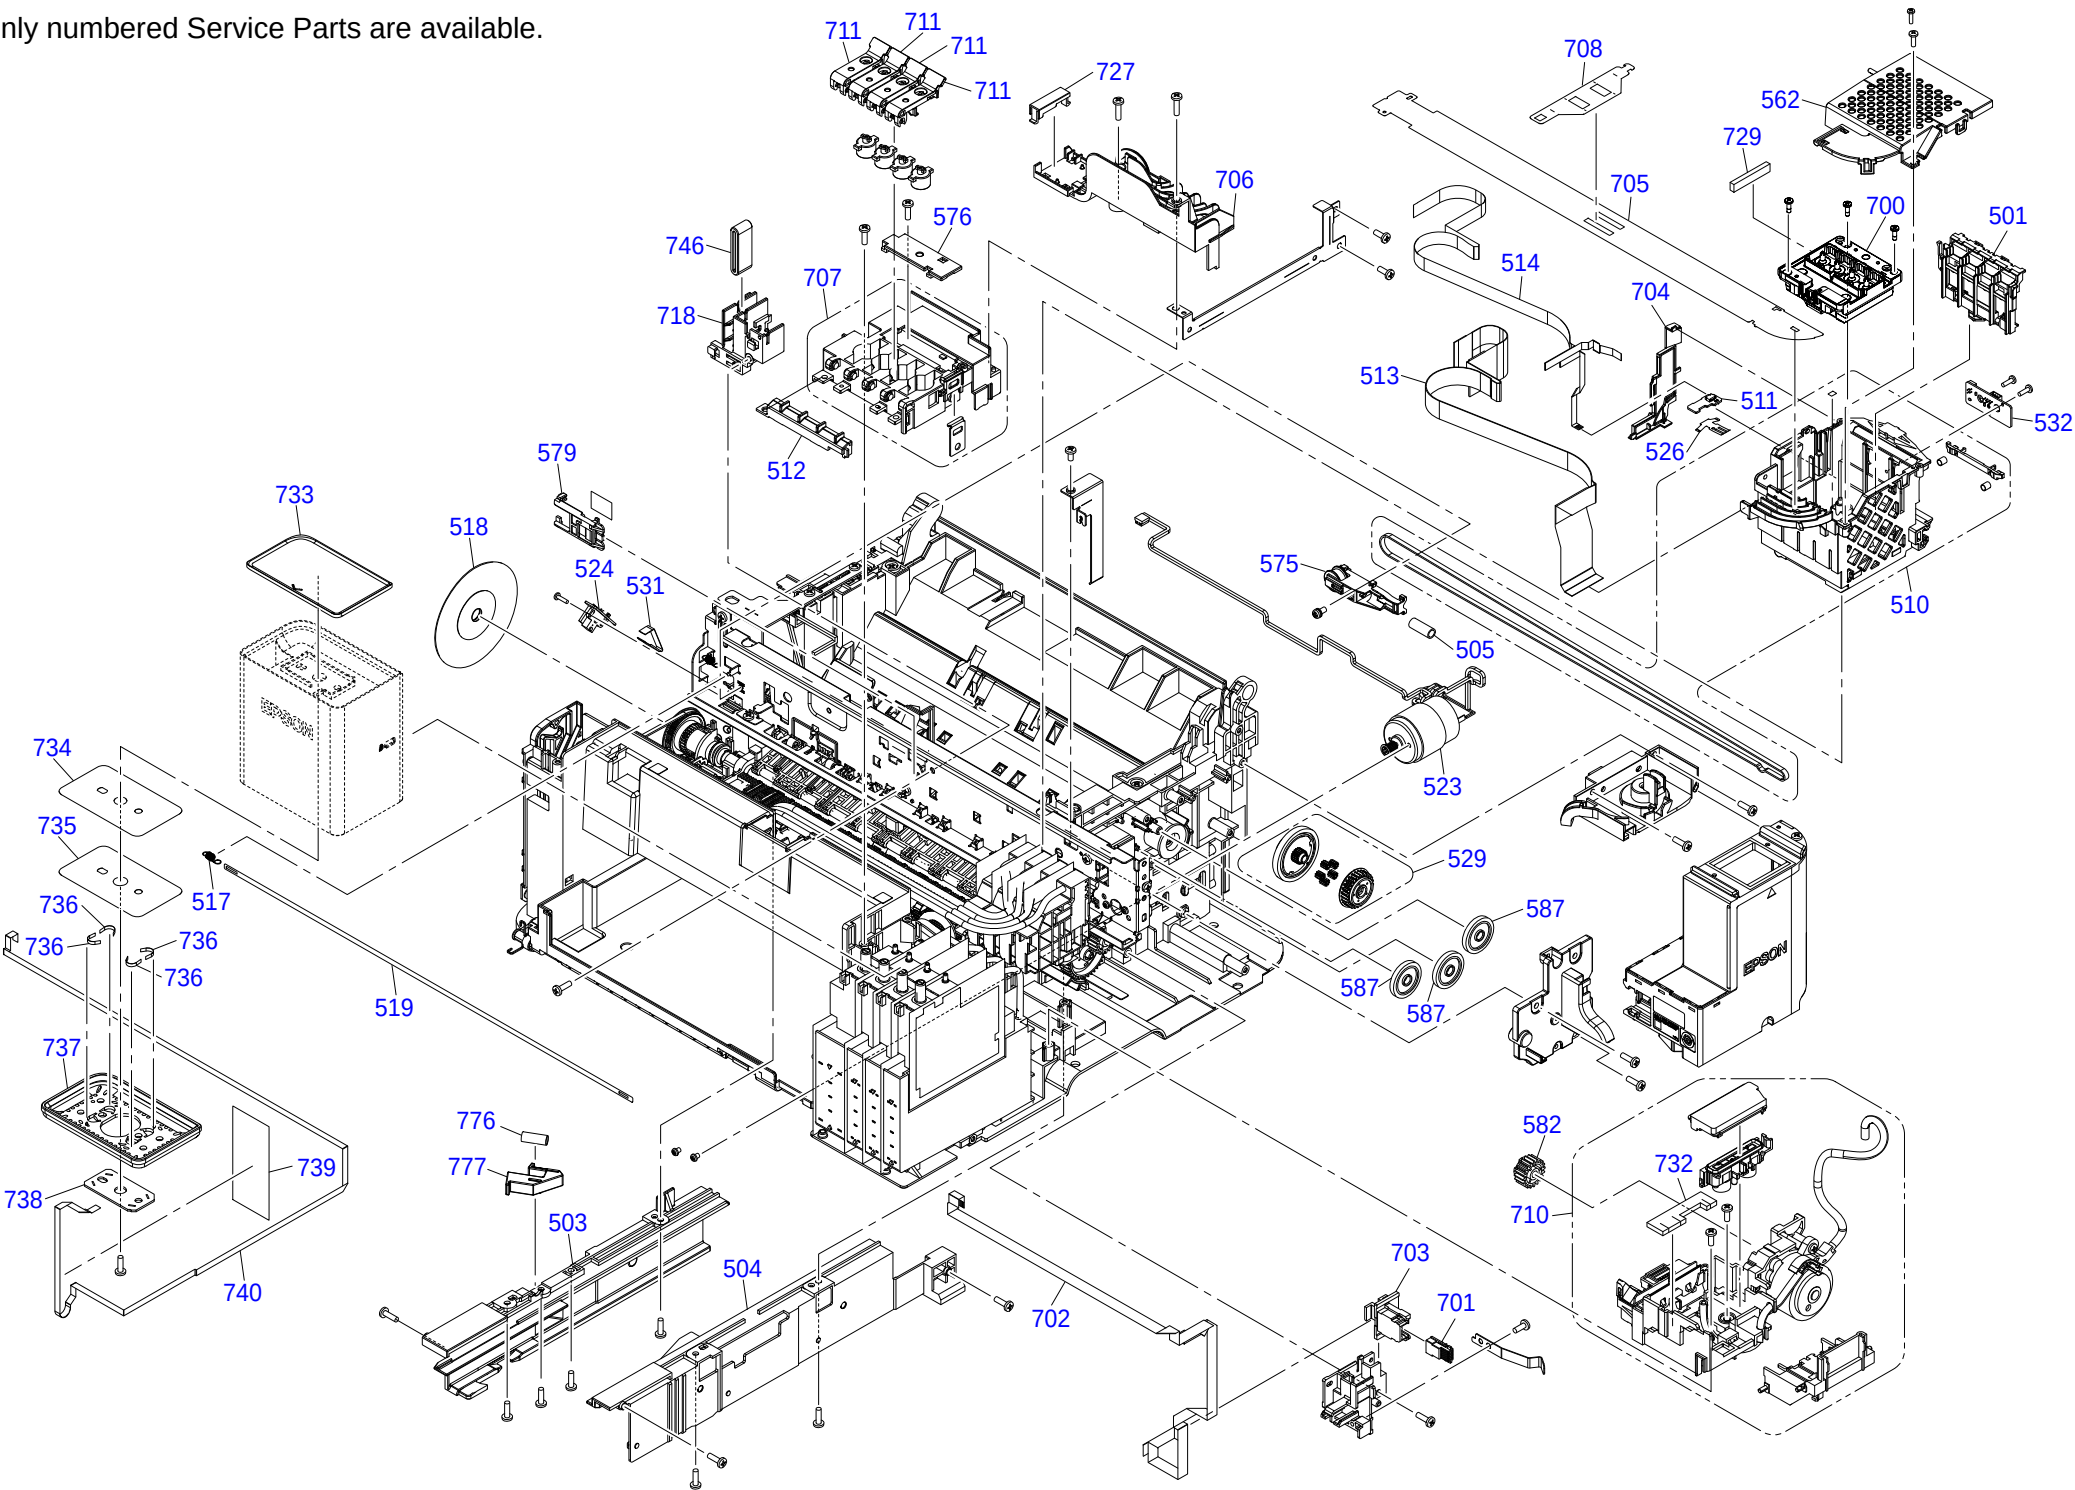


Only numbered Service Parts are available.

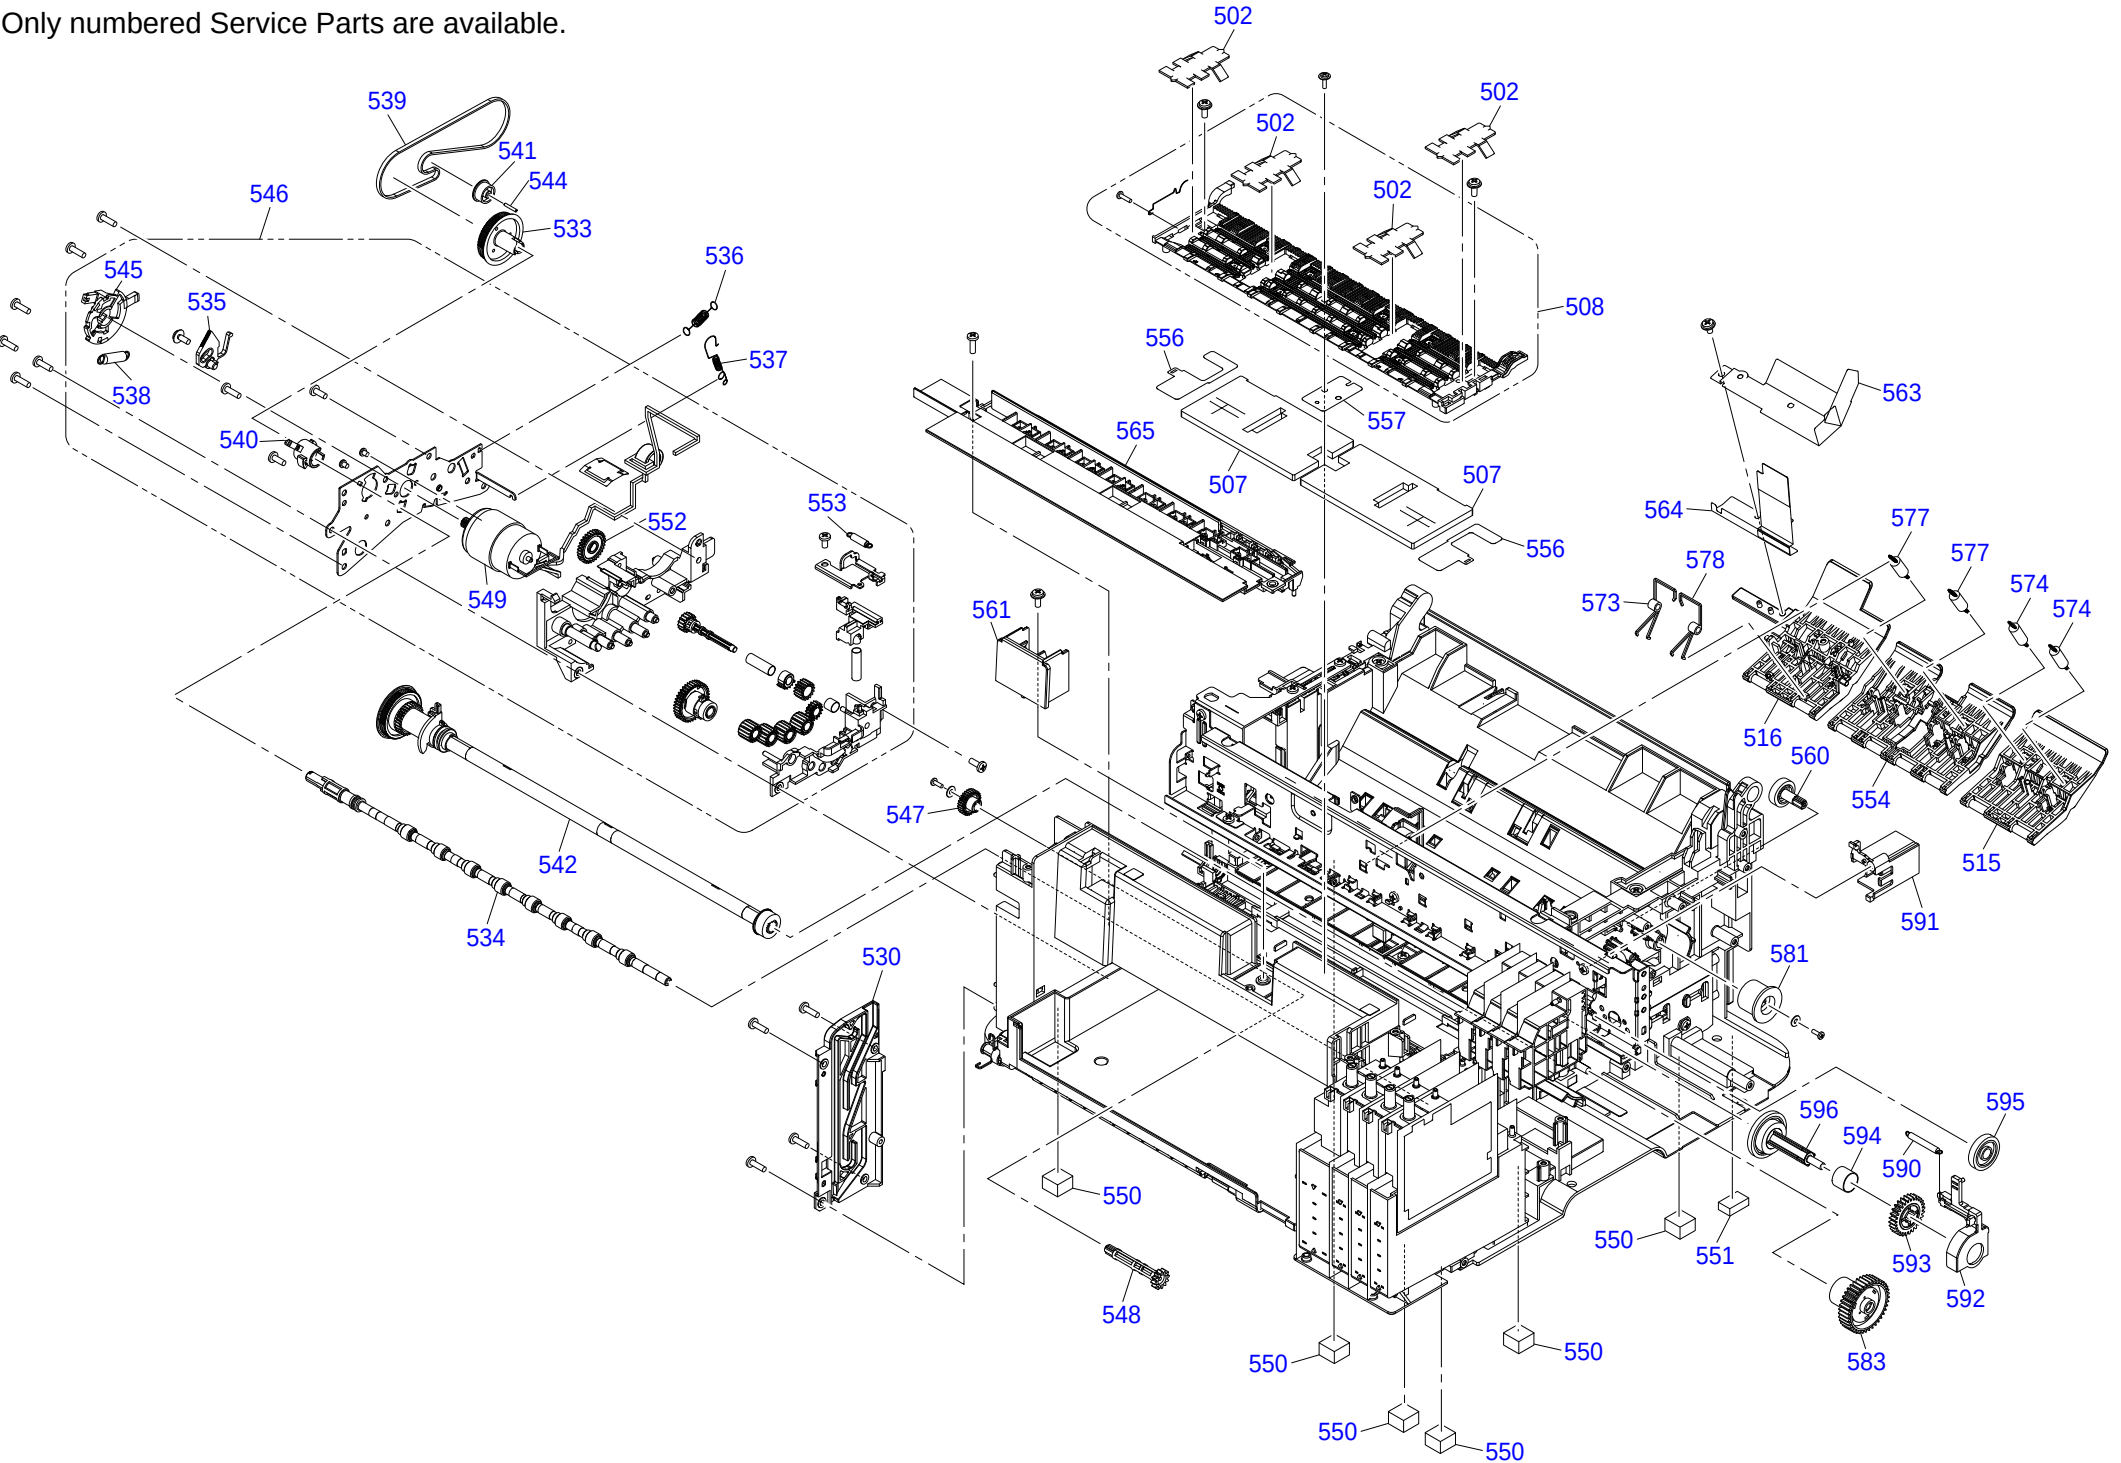


Only numbered Service Parts are available.

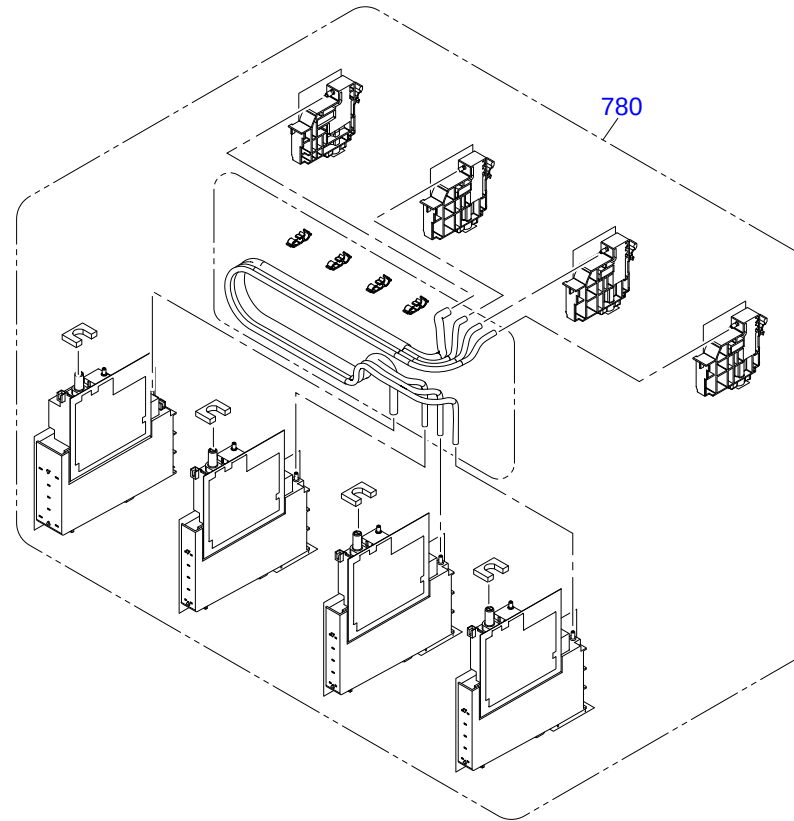


Only numbered Service Parts are available.

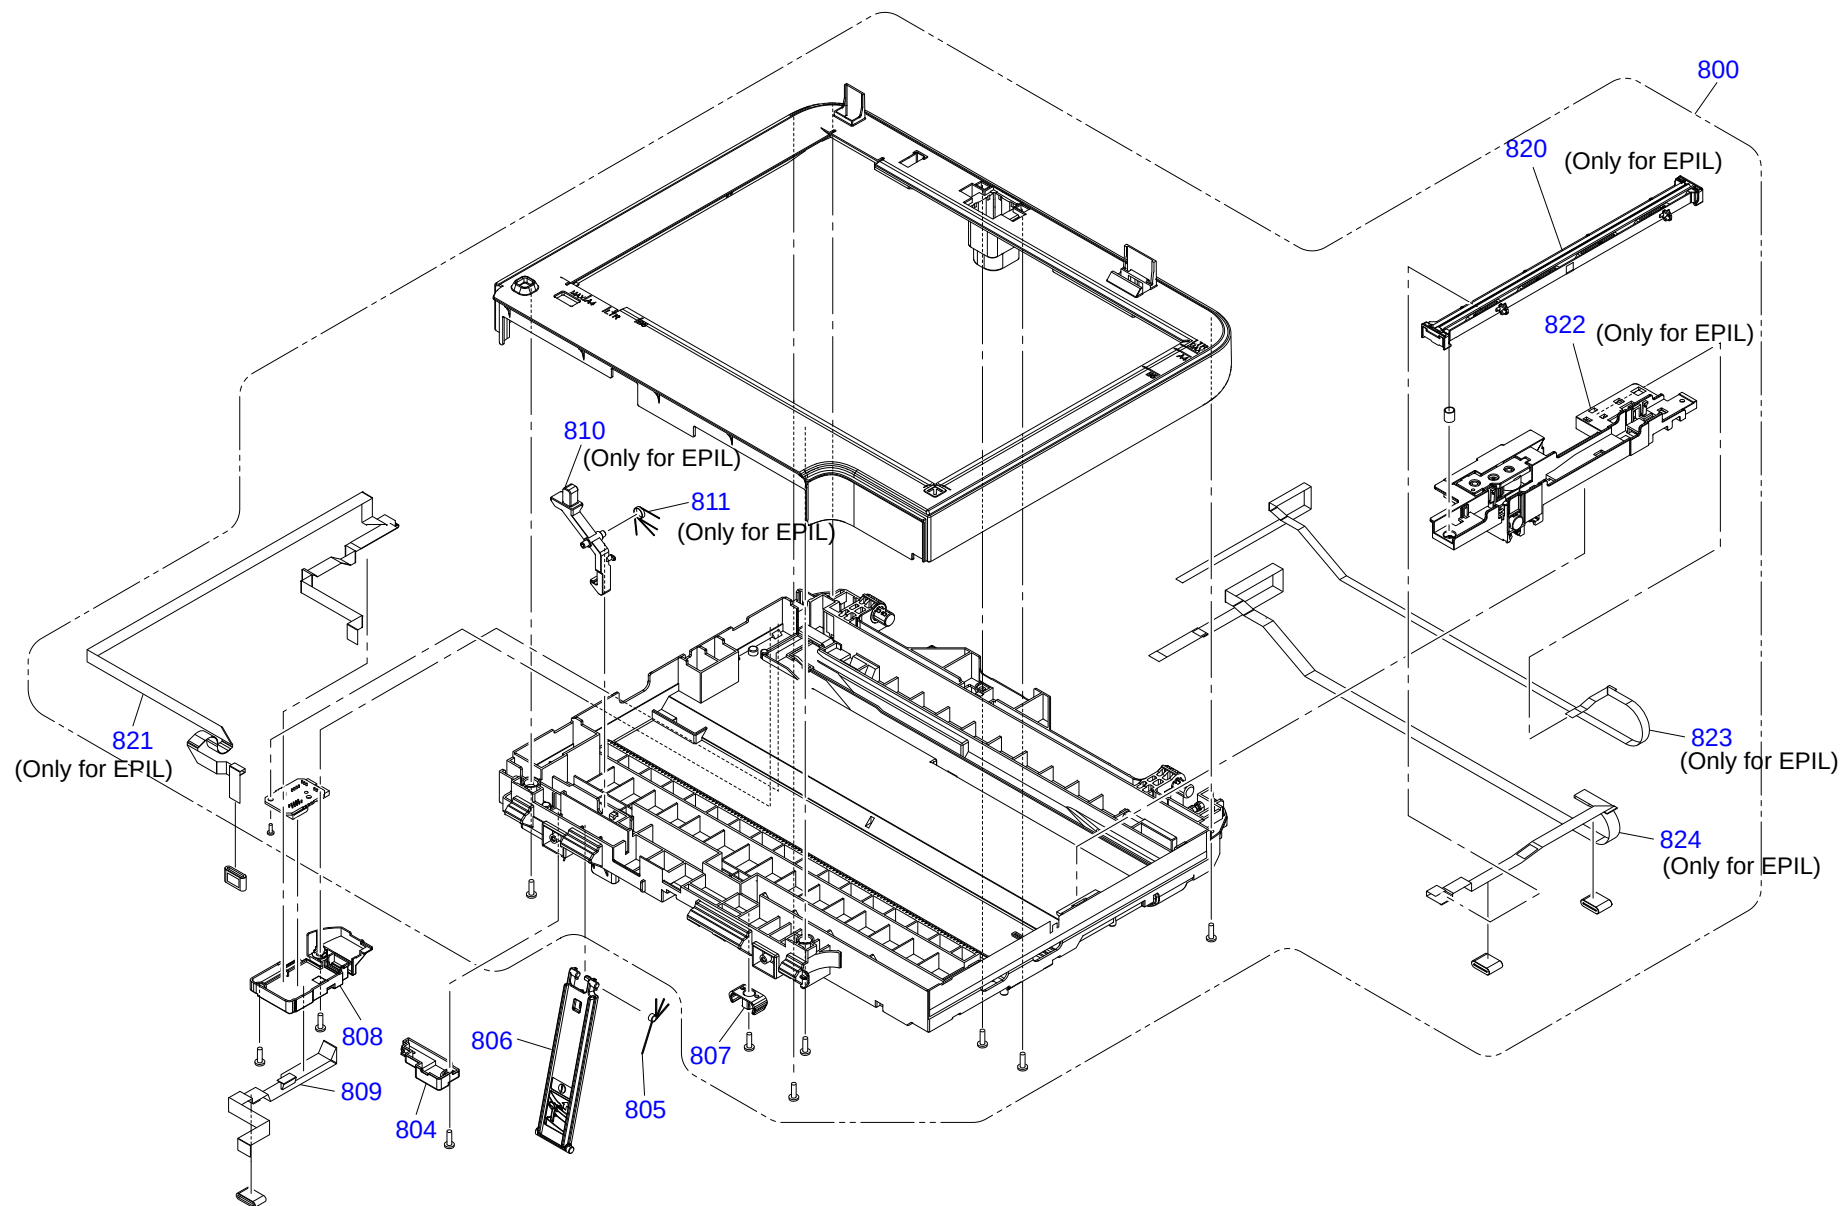

Only numbered Service Parts are available.

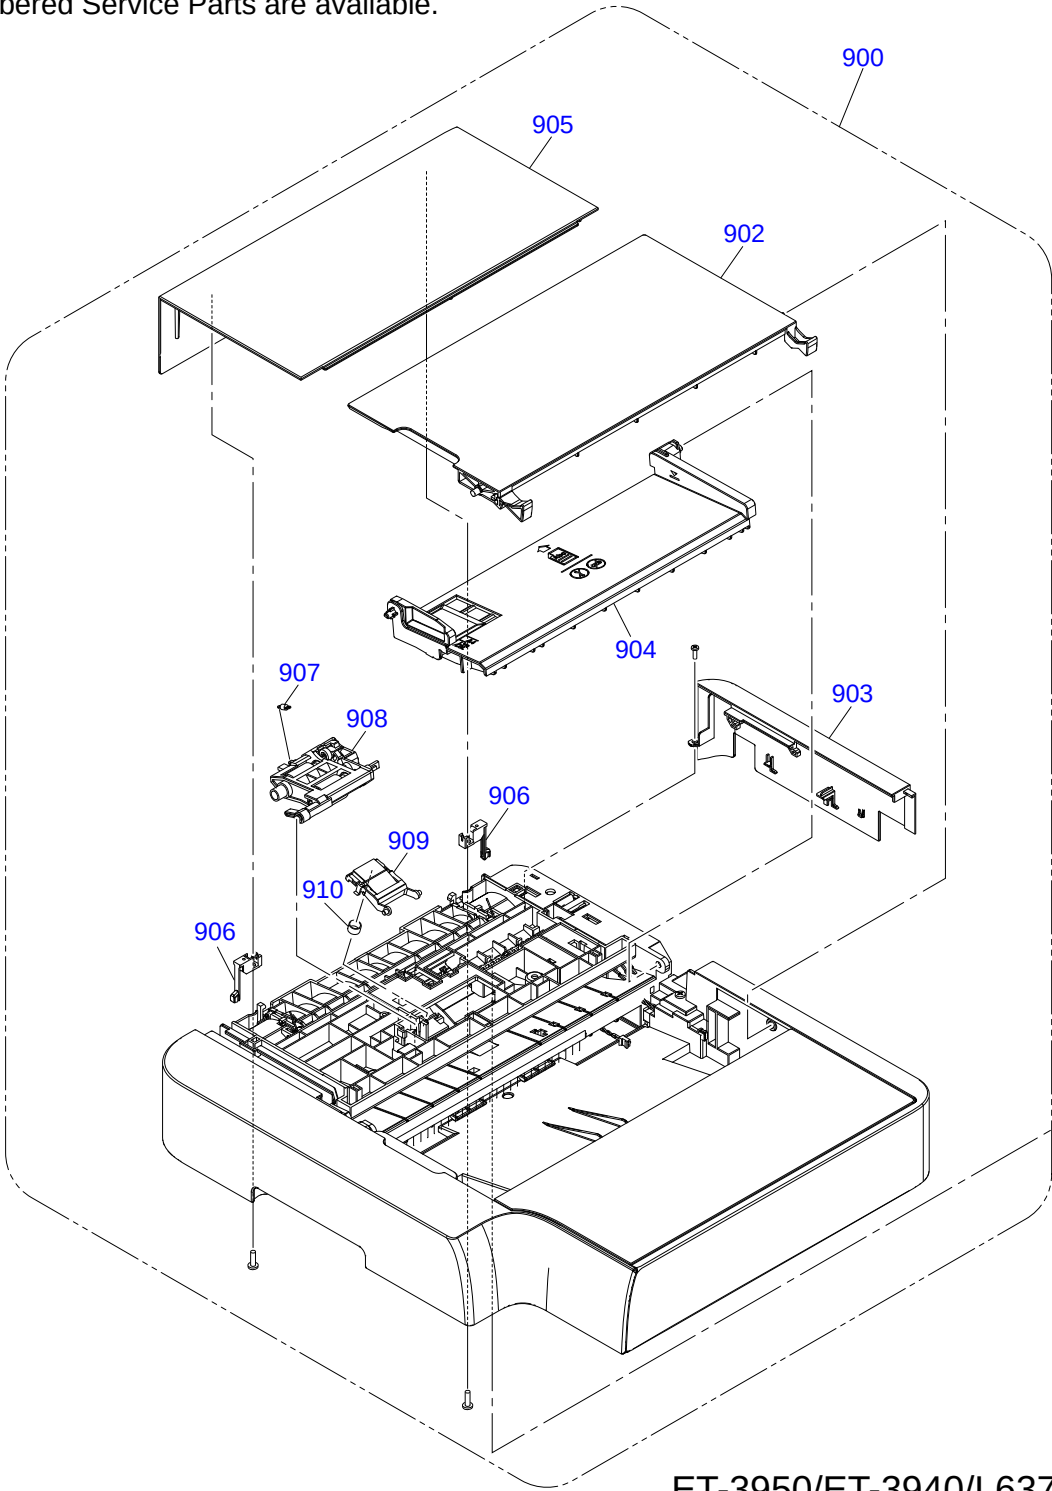

ET-3950/ET-3940/L6370 Series

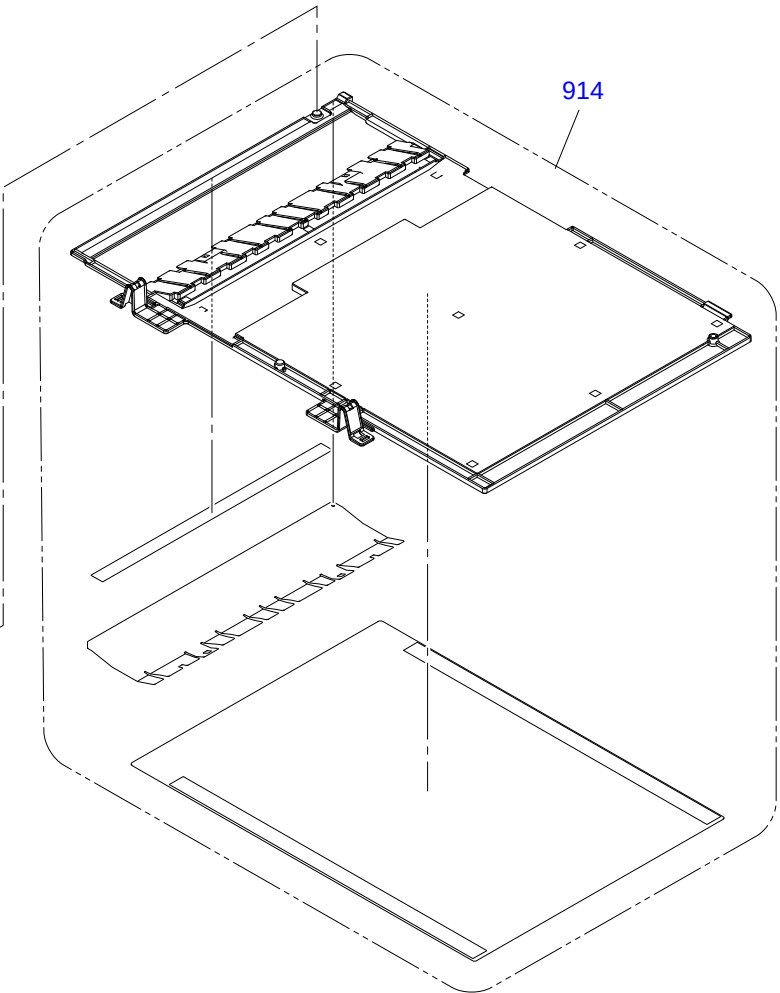

No.8